


C1700 TRADITIONAL CABINET DRAWER PULL

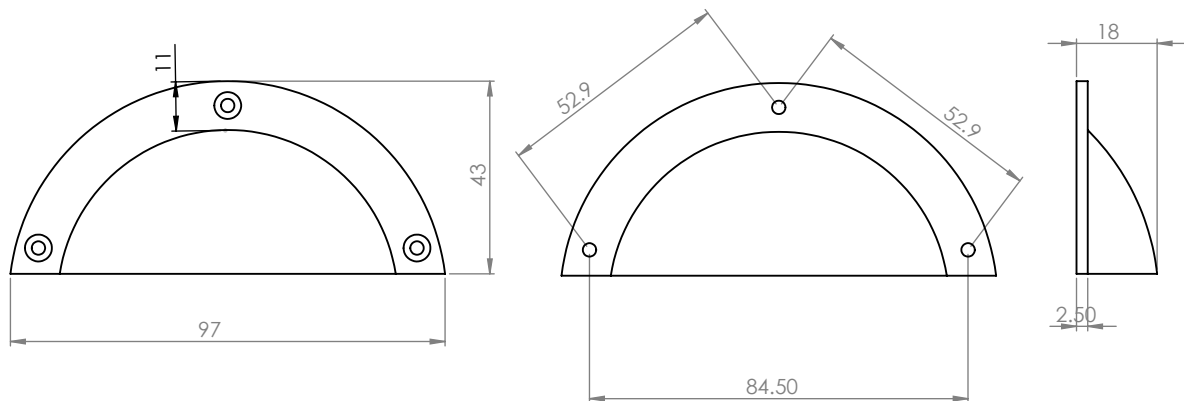

② Dimensions:
see the outlines given above

③ Starter screw x 1pc.
Drill pilot holes, use the starter screw
to cut a thread

3 x Brass wood screws
Fasten the brass screw into the pilot hole

FINISHES

- ME Matt Bronze finish
- SB Satin Brass finish
- PN Polished Nickel finish
- SN Satin Nickel finish
- AT Antique Brass finish
- SR Satin Rose Gold finish
- SC Satin Chrome finish
- PE Polished Brass finish
- PC Polished Chrome finish
- BK Matt Black finish
- ULB Unlacquered Brass

Overview

① Traditional Cabinet
Drawer Pull
illustrated

② General Dimension
of Traditional Cabinet
Drawer Pull

③ Supplied with:
3 x Brass wood screws
1x Starter screw


M Marcus Ltd., Dudley

Product Code

C1700

Material

Solid Brass

Sizes shown are in mm and approximate.
We reserve the right to amend where
necessary and without any prior notice.